


STAIRS

Support Rails to be attached on flat surface, like concrete stairs.

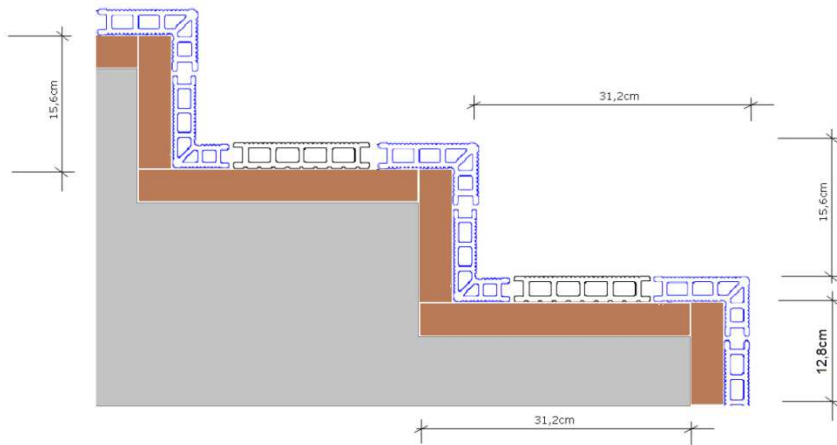

It is recommended to install decking boards with UPM ProFi Alu Rail (instead of T-Clips) for more stability.

If the existing construction cannot be changed to match the dimensions of UPM ProFi profiles, best is to use UPM ProFi Rail Step at the front stair edge and UPM ProFi Deck boards in the internal corners:



Please ensure that you meet the requirements of the local building regulations. UPM ProFi Support Rails must only be installed on hard flat surfaces. Any raised Deck should be built on a Aluminum or timber frame. UPM ProFi Deck boards must not be used above ground floor applications, unless built on a solid load bearing surface: e.g. a concrete steps.